



# PK55XX/RFK55XX-433

Installation Instructions, Instructions d'Installation , Instrucciones de instalación, Instruções de instalação


## English, Français, Español, Português

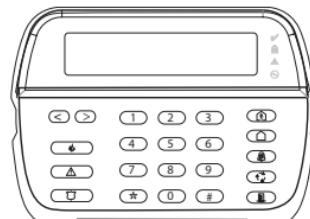


PK5500  
RFK5500

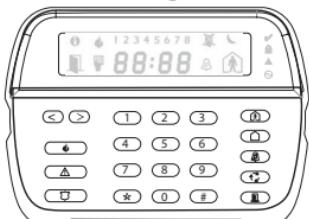

PK5501  
RFK5501

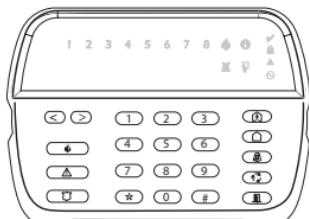

PK5508  
RFK5508

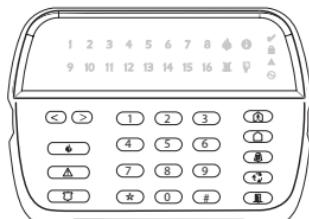

PK5516  
RFK5516

**WARNING:** Please refer to the System Installation Manual for information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer.

**NOTE:** These instructions shall be used in conjunction with the system Installation Manual of the Control Panel with which this equipment is intended to be used.

**ATTENTION:** Ce manuel contient des informations sur les restrictions concernant le fonctionnement et l'utilisation du produit et des informations sur les restrictions en ce qui concerne la responsabilité du fabricant. La totalité du manuel doit être lu attentivement.

**NOTE:** Ce manuel doit être utilisé en conjonction avec le Manuel d'installation du Panneau de contrôle.

**ATENCIÓN:** Consulte el Manual de instalación del sistema para obtener información sobre las limitaciones del uso y funciones del producto, así como las limitaciones de la responsabilidad del fabricante.

**NOTA:** Estas instrucciones deberán utilizarse conjuntamente con el Manual de instalación del sistema del Panel de control con el que se vaya a utilizar este equipo.

**AVISO:** Consulte o Manual de instalación do sistema para obter informações acerca das limitações relativas à utilização do produto e funções e informações acerca das limitações relativas à imputação de responsabilidades ao fabricante.

**NOTA:** Estas instruções devem ser utilizadas em conjunto com o Manual de instalação do sistema do painel de controlo com o qual este equipamento se destina a ser utilizado.

DSC®

PowerSeries™

SECURITY SYSTEM



29007203R002

# English Installation Instructions

The PK55XX/RFK55XX keypads can be used on security systems with up to 64 zones. These keypads are compatible with the following DSC security systems:

- PC580      • PC585      • PC1555MX      • PC1565
- PC1616     • PC1832     • PC1864     • PC5005
- PC5008     • PC5010     • PC5015     • PC5016
- PC5020

The RFK55XX keypads combine a wireless receiver with the respective PK55XX keypad.

## Specifications

- Temperature range: -10°C to +55°C (14°F to 131°F), Temperature range for UL/ULC: 0°C to +49°C (32°F to 120°F)
- Humidity (MAX): 93%R.H.
- Plastic enclosure protection degree: IP30, IK04
- Voltage rating: 12Vdc nominal
- Connects to control panel via 4-wire Keypad
- 1 Keypad zone input/PGM output\*
- PK55XX Current draw: 50mA (standby)/125mA (maximum)
- RFK55XX Current draw: 75mA (standby)/135mA (maximum)
- Wall mount tamper
- 5 programmable function keys
- Ready (Green LED), Armed (Red LED), Trouble (Yellow LED), AC (Green LED)
- Low temperature sensor
- Frequency: 433.92MHz (RFK55XX-433 Only)
- Up to 32 wireless zones (RFK55XX Only)

**NOTE: \* Zone not to be programmed as Fire type or 24h type.**

## Unpacking

The Power keypad package includes the following parts:


- One Power keypad
- Keypad inner door labels
- Four mounting screws
- 2 end-of-line resistors
- Installation Instructions

## Mounting

You should mount the keypad where it is accessible to designated points of entry and exit. Once you have selected a dry and secure location, perform the following steps to mount the keypad.

## Disassemble Keypad

1. Removing the keypad from the backplate for the first time.  
(a) Position the keypad as indicated, insert screwdriver and rotate.

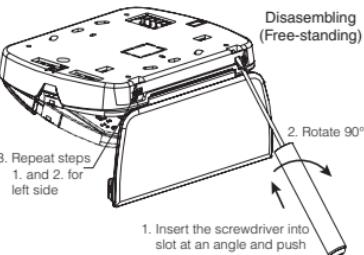

2. Removing the keypad from backplate once mounted.
  - (a) Open door, holding it 90° to the keypad, as shown below.
  - (b) Insert screwdriver into slot located under the door hinge and rotate the screwdriver.

&lt;/



## Limited Warranty

Digital Security Controls warrants that for a period of 12 months from the date of purchase, the product shall be free of defects in materials and workmanship under normal use and that in fulfilment of any breach of such warranty, Digital Security Controls shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in parts and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Digital Security Controls such as lightning, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration or improper application of the equipment.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Digital Security Controls. Digital Security Controls neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall Digital Security Controls be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

*Warning: Digital Security Controls recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.*

*Important Information: Changes or modifications not expressly approved by Digital Security Controls could void the user's authority to operate this equipment.*

## FCC Compliance Statement

**Caution:** Changes or modifications not expressly approved by Digital Security Controls could void your authority to use this equipment.

This equipment generates and uses radio frequency energy and if not installed and used properly, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for Class B device in accordance with the specifications in Subpart "B" of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in any residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to television or radio reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna
- Relocate the alarm control with respect to the receiver
- Move the alarm control away from the receiver
- Connect the alarm control into a different outlet so that alarm control and receiver are on different circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the FCC helpful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402, Stock # 004-000-00345-4.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IC:160A-RFK55XX4

The term IC before the radio certification number signifies that the Industry Canada technical specifications were met.

EN5131-1 Grade2/Class II

Operating Instructions shall be made available to the user.

DSC erklærer herved at denne komponenten overholder alle viktige krav samt andre bestemmelser gitt i direktiv 1999/5/EC.

Por este meio, a DSC, declara que este equipamento está em conformidade com os requisitos essenciais e outras determinações relevantes da Directiva 1999/5/EC.

"DSC bekräftar härmed att denna apparat uppfyller de väsentliga kraven och andra relevanta bestämmelser i Direktivet 1999/5/EC."

Con la presente la Digital Security Controls dichiara che questo prodotto è conforme ai requisiti essenziali ed altre disposizioni rilevanti relative alla Direttiva 1999/5/CE.

Por la presente, DSC declara que este equipo está en conformidad con los requisitos esenciales y otros requisitos relevantes de la Directiva 1999/5/EC.

Hierdurch erklärt DSC, daß dieses Gerät den erforderlichen Bedingungen und Voraussetzungen der Richtlinie 1999/5/EC entspricht.

"Άια του περίπτωση, η DSC, δηλώνει ότι αυτή η συσκευή είναι σύμφωνη με τις απαιτήσεις και με όλες τις άλλες σχετικές αναφορές της Οδηγίας 1999/5/ΕC."

Hierbij verklaart DSC dat dit toestel in overeenstemming is met de eisen en bepalingen van richtlijn 1999/5/EC.

Par la présente, DSC déclare que cet article est conforme aux exigences essentielles et autres relevantes stipulations de la directive 1999/5/EC.

DSC vakuuttaa tätteenviän direktiivin 1999/5/EC mäännäiset vaatimukset. Hereby, DSC, declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The complete R & TTE Declaration of Conformity can be found at [www.dsc.com/intl/fccdirect.htm](http://www.dsc.com/intl/fccdirect.htm).



©2006 Digital Security Controls, Toronto, Canada • [www.dsc.com](http://www.dsc.com)

Tech. Support, Centre d'aide: 1-800-387-3630 (Canada, US), 905-760-3036

# Keypad Enrollment

Enter keypad programming by pressing [\*][8][Installer's Code][000].

## [0] Partition / Slot Assignment

Digit	Option	Valid Range	Default	
1st	Partition Assignment (0=Global Keypad)	0 to 8	1	<input type="text"/>
2nd	Slot Assignment	1 to 8	LED,ICON=1/LCD=8	<input type="text"/>

## [1]-[5] Function Key Assignment

Function Key	Button	Valid Range	Default	Function	
[1] Function Key 1 Assignment		00 to 32	03	Stay Arm	<input type="text"/>
[2] Function Key 2 Assignment		00 to 32	04	Away Arm	<input type="text"/>
[3] Function Key 3 Assignment		00 to 32	06	Chime On/Off	<input type="text"/>
[4] Function Key 4 Assignment		00 to 32	14	Command Output 2	<input type="text"/>
[5] Function Key 5 Assignment		00 to 32	16	Quick Exit	<input type="text"/>

## Keypad Function Keys

Please see your system installation manual for a complete list of all the function key options available for your system.

[00] - Null	[08] - Bypass Mode	[17] - Activate Stay/Away	[28] - Partition 4 Select
[01] - Partition 1 Select	[09] - Trouble Display	[19] - Command Output 3	[29] - Partition 5 Select
[02] - Partition 2 Select	[10] - Alarm Memory	[21] - Command Output 4	[30] - Partition 6 Select
[03] - Stay Arm	[11] - User Programming	[22] - Activate Camera	[31] - Partition 7 Select
[04] - Away Arm	[12] - User Functions	[23] - Bypass Recall	[32] - Partition 8 Select
[05] - No Entry Arm	[13] - Command Output 1	[24] - Bypass Group Recall	
[06] - Chime On/Off	[14] - Command Output 2	[26] - Time & Date Program	
[07] - System Test	[16] - Quick Exit	[27] - Partition 3 Select	

## Keypad Programming

Enter keypad programming by pressing [\*][8][Installer Code][\*]

### [001]-[064] Zone Label 1 to 64 (PK5500\RFK5500 Only)

ex. For Zone 1 enter section [001], for Zone 2 enter section [002] etc. Default: "Zone 1" - "Zone 64"

Section	Zone	Label	
[001] to [064]	1 to 64	<input type="text"/>	

### [065] Fire Alarm Label (28 Characters) (PK5500\RFK5500 Only)

Default: "Fire Zone"

[065]

### [066] Fail to Arm Event Message (PK5500\RFK5500 Only)

Default: "System Has Failed to Arm"

[066]

### [067] Alarm When Armed Event Message (PK5500\RFK5500 Only)

Default: "Alarm Occurred While Armed < >"

[067]

## [071] First User Display Mask

Default	Option	ON	OFF
ON	1	Hold [P]anic Key prompt ON	Hold [P]anic Key prompt OFF
ON	2	Auto-arm Control/Time prompt ON	Auto-arm Control/Time prompt OFF
ON	3	Quick Arm prompt ON	Quick Arm prompt OFF
ON	4	Interior Arm prompt ON	Interior Arm prompt OFF
OFF	5	Quick Exit prompt ON	Quick Exit prompt OFF
OFF	6	Thermostat Control prompt ON	Thermostat Control prompt OFF
OFF	7	ACK All Trouble Prompt ON	ACK All Trouble Prompt OFF
OFF	8	Music Input prompt ON	Music Input prompt OFF

## [072] Second User Display Mask

Default	Option	ON	OFF
ON	1	User-initiated Call-up prompt ON	User-initiated Call-up prompt OFF
OFF	2	For Future Use	
OFF	3	Walk Test prompt ON	Walk Test prompt OFF
ON	4	Command Output#1 prompt ON	Command Output#1 prompt OFF
ON	5	Command Output#2 prompt ON	Command Output#2 prompt OFF
OFF	6	Command Output#3 prompt ON	Command Output#3 prompt OFF
OFF	7	Command Output#4 prompt ON	Command Output#4 prompt OFF
OFF	8	For Future Use	

### [073] Download LCD Message Duration (PK5500\RFK5500 Only)

Default: 003    (Valid entries are 000-255), 000 = Unlimited Message Disp.

This number represents the number of times the Downloaded message is cleared by pressing any key while the message is up after timeout).

## [074] Key Options

Default	Option	ON	OFF
ON	1	[F]ire Key Enabled	[F]ire Key Disabled
ON	2	[A]uxiliary Key Enabled	[A]uxiliary Key Disabled
ON	3	[P]anic Key Enabled	[P]anic Key Disabled
OFF	4-8	For Future Use	

## [076] First Keypad Options

Default	Option	ON	OFF
ON	1	Display Code when Programming	Display "Xs" when Programming
ON	2	Local Clock Display ON	Local Clock Display OFF
OFF	3	Local Clock Displays 24-hr Time	Local Clock Displays AM/PM
ON	4	Auto Alarm Memory Scroll Enabled	Auto Alarm Memory Scroll Disabled
OFF	5	Local Display of Temperature ON	Local Display of Temperature OFF
ON	6	Bypass Options prompt ON	Bypass Options prompt OFF
OFF	7	For Future Use	
OFF	8	Auto-Scroll Open Zones ON	Auto-Scroll Open Zones OFF

## [077] Second Keypad Options

Default	Option	ON	OFF
ON	1	Chime Enabled for Zone Openings	Chime Disabled for Zone Openings
ON	2	Chime Enabled for Zone Closings	Chime Disabled for Zone Closings
OFF	3	5th Terminal is Keypad PGM Output	5th Terminal is Keypad Zone Input
ON	4	Language Selection from Any Menu	Language Selection From Installer's
OFF	5	Power LED Enabled	Power LED Disabled
ON	6	Power LED indicates AC present	Power LED indicates AC absent
ON	7	Alarms always Displayed When Armed	Alarms not Displayed When Armed
OFF	8	Low Temperature Warning Enabled	Low Temperature Warning Disabled

## [080] PGM Terminal 1

Default: 01 | | | | PGM Output Number

## [101]-[108] Partition Labels (PK5500\RFK5500 Only)

ex. For Partition 1 enter section [101], for Partition 2 enter section [102] etc.

Section	Partition	Label
[101] to [108]	1 to 8	

**NOTE: Partition 1 Label is also used as the System Label**

## [120]-[151] Command Output Labels (PK5500\RFK5500 Only)

Default: "Command\_O/P\_1" - "Command\_O/P\_4"

For Partition 1 Command O/P 1 to 4 enter [120] to [123]

For Partition 2 Command O/P 1 to 4 enter [124] to [127]

For Partition 3 Command O/P 1 to 4 enter [128] to [131]

For Partition 4 Command O/P 1 to 4 enter [132] to [135]

For Partition 5 Command O/P 1 to 4 enter [136] to [139]

For Partition 6 Command O/P 1 to 4 enter [140] to [143]

For Partition 7 Command O/P 1 to 4 enter [144] to [147]

For Partition 8 Command O/P 1 to 4 enter [148] to [151]

Section	Part	Cmd. Output	Label
[120]-[151]	1 to 8	1 to 4	

## [201]-[264] Door Chime Sound Programming

You can program the keypad to make up to four different door chime sounds for individual zones.

ex. For Zone 1 enter section [201], for Zone 2 enter section [202] etc.

Default	Option	ON	OFF
ON	1	1 6 Beeps	Disabled
OFF	2	"Bing-Bing" Sound	Disabled
OFF	3	"Ding-Dong" Sound	Disabled
OFF	4	Alarm Tone	Disabled
OFF	5-8	For Future Use	

## [995][\*] Reset Keypad Options to Factory Default


## [996][\*] Label Default (PK5500\RFK5500 Only)

## [997] View Software Version (PK5500\RFK5500 Only)

## [998][\*] Initiate Global Label Broadcast (PK5500\RFK5500 Only)

## [999][\*] Reset Keypad EEPROM to Factory Defaults

## Keypad Display Symbols

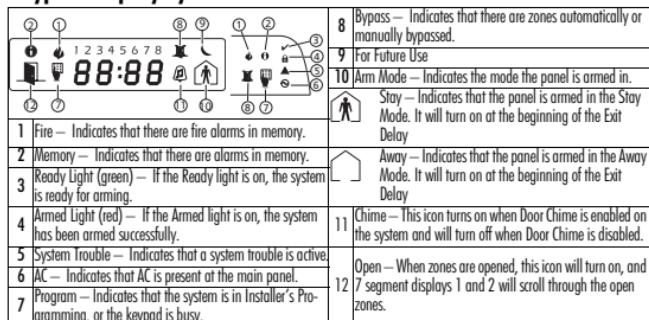

## **Wireless Integration (RFKEEXX Only)**

(RFK35XX Only)  
Compatible Wireless Devices (RFK35XX 433 Only)

**Compatible Wireless Devices** (RFK55XX-43)  
The RFK55XX can receive signals from the following devices:

- WLS914-433 Pet Immune PIR
  - WS4965 Tri-Zone Contact
  - WS4938 Panic Button
  - WS4916 Smoke Detector
  - WLS912L-433 Glass Break Detector
  - WLS904(P)L-433 Pet Immune PIR
  - WLS925L-433 Mini Door/Window Contact
  - WS49X9 Wireless Keys

## Downloading

The RFK55XX product has an integrated wireless receiver. When downloading to this keypad, please select the PC1512-433 v5.1 file. DLS2002 and greater must be used in order to have the capability of downloading to this keypad.

# Testing Wireless Devices

1. Temporarily put the wireless devices in the places you want to mount them.
  2. At a system keypad, enter [**\***][**8**][Installer Code].
  3. Enter programming section **[904]**, then enter the two digit zone number.

**NOTE:** If global placement test is enabled (Section [90], option 8 ON) enter [01] to test all zones.

4. Activate the device being tested until a result is displayed on the keypad or sounded by the keypad or bell.

Result	LED/ICON Keypad	LCD Keypad	Bell/Buzzer
Good	Light 1 ON Steady	Good	1 Beep/Squawk
Bad	Light 3 ON Steady	Bad	3 Beeps/Squawks

Activate the device until you get 3 good results in a row. Wait 10 seconds between each test on the same device. You may mount wireless devices where results were good.

Devices indicating a bad result must be moved to another location. You may only have to move the device a few inches to correct a bad result.

**NOTE:** Do not mount any device where a "bad" test result was indicated.

### **Testing Portable Device Reception**

To test portable devices (e.g., WS4938, WS4939) press the button(s) at several different points in the installation, to confirm the coverage

area. If these devices do not operate from all points in the installation, you will need to move the RFK55XX.

# Replacing Wireless Device Batteries

1. Remove the cover of the device from its backplate. This creates a tamper condition on the zone.
  2. Refer to the battery installation instructions on the Installation Sheet of each component. Be sure to note the proper orientation of the batteries as you install them.
  3. When the fresh batteries are in place, re-attach the cover to the backplate. The tamper is restored and the zone sends a battery trouble restoration signal to the receiver. The battery trouble is now clear and the device should function normally.

**NOTE:** When batteries in one device need to be replaced, the batteries in all devices should be replaced at the same time.

# Troubleshooting

- When I enter the 2-digit zone number when adding a wireless device, the keypad gives me a long beep.
    - You cannot enter ESNs unless the RFK55XX is properly connected to the Keybus.
  - I have entered the ESN for the device but when I violate the device, the zone does not show open on the keypad.

Check the following:

    - Ensure the ESN has been entered correctly
    - Ensure that the zone is enabled for the partition (if partition programming is used).

- Ensure that the wireless zone is not assigned to a zone used by

- Ensure that the zone is programmed for something other than "Null Operation" and that the wireless zone attribute is turned on.

3. When I try a module placement test I get no result or "Bad" results. Check the following:

  - Verify that you are testing the correct zone
  - Verify that the correct ESN was entered when the device was enrolled
  - Verify that the device is in range of the RFK55X. Try testing the device in the same room as the receiver.
  - Confirm that the RFK55X is properly connected to the Keybus.
  - Check that you are testing the zone correctly. Refer to the instructions that came with the zone.
  - Check that the batteries are working and installed correctly.
  - Look for large metal objects that may be preventing the signal from reaching the RFK55X

- The device must be located where consistent "Good" results are obtained. If several devices show "Bad" results, or if panic pendants and wireless keys operate inconsistently, move the receiver. The LED on the motion detector does not turn on when I walk in front of the unit.

- The LED on the motion detector is for walk test purposes only. See your WLS904-433/WLS904P(L)-433 Instruction Sheet for walk test instructions.

#### **Notes:**

# Wireless Programming (RFK55XX Only)

Enter Wireless programming by pressing [\*][8][Installer's Code][804]

## [01]-[32] Wireless Device Serial Number Zone Serial Numbers Default = 000000

[01]	Zone 1		[17]	Zone 17	
[02]	Zone 2		[18]	Zone 18	
[03]	Zone 3		[19]	Zone 19	
[04]	Zone 4		[20]	Zone 20	
[05]	Zone 5		[21]	Zone 21	
[06]	Zone 6		[22]	Zone 22	
[07]	Zone 7		[23]	Zone 23	
[08]	Zone 8		[24]	Zone 24	
[09]	Zone 9		[25]	Zone 25	
[10]	Zone 10		[26]	Zone 26	
[11]	Zone 11		[27]	Zone 27	
[12]	Zone 12		[28]	Zone 28	
[13]	Zone 13		[29]	Zone 29	
[14]	Zone 14		[30]	Zone 30	
[15]	Zone 15		[31]	Zone 31	
[16]	Zone 16		[32]	Zone 32	

## [41]-[56] Wireless Key Serial Number Wireless Key Serial Numbers Default = 000000

[41]	Key 1		[49]	Key 9	
[42]	Key 2		[50]	Key 10	
[43]	Key 3		[51]	Key 11	
[44]	Key 4		[52]	Key 12	
[45]	Key 5		[53]	Key 13	
[46]	Key 6		[54]	Key 14	
[47]	Key 7		[55]	Key 15	
[48]	Key 8		[56]	Key 16	

## [61]-[68] Wireless Function Key Options

Function Key	Key 1	Default	Key 2	Default	Key 3	Default	Key 4	Default
[61]	Partition 1		03		04		27	
[62]	Partition 2		03		04		27	
[63]	Partition 3		03		04		27	
[64]	Partition 4		03		04		27	
[65]	Partition 5		03		04		27	
[66]	Partition 6		03		04		27	
[67]	Partition 7		03		04		27	
[68]	Partition 8		03		04		27	

## Keypad Function Keys

Please see your system installation manual for a complete list of all the function key options available for your system.

[00] - Null	[06] - Chime On/Off	[16] - Quick Exit	[27] - Disarm
[03] - Stay Arm	[07] - System Test	[17] - Activate Stay/Away	[28] - Fire Alarm
[04] - Away Arm	[13] - Command Output 1	[19] - Command Output 3	[29] - Auxiliary Alarm
[05] - No Entry Arm	[14] - Command Output 2	[21] - Command Output 4	[30] - Panic Alarm
[69] Wireless Keys (1-16) Partition Assignments Default = 01			

Key 1		Key 5		Key 9		Key 13	
Key 2		Key 6		Key 10		Key 14	
Key 3		Key 7		Key 11		Key 15	
Key 4		Key 8		Key 12		Key 16	

## [81] Wireless supervisory Window

Default: [NA] 96 = 24 hours / [EU] 10 = 2.5 hours

The window is programmed in 15 minute increments. Valid entries are 10 to 96, equal to 2.5 to 24 hours.

## [82]-[85] Zone Device Supervision Options

Default ON	Zone	Supervision ON/OFF						
Option 1	1		9		17		25	
Option 2	2		10		18		26	
Option 3	3		11		19		27	
Option 4	4		12		20		28	
Option 5	5		13		21		29	
Option 6	6		14		22		30	
Option 7	7		15		23		31	
Option 8	8		16		24		32	

## [90] Other Options

NA Default	EU Default	Option	ON	OFF
OFF	OFF	1-4	For Future Use	
ON	OFF	5	RF Delinquency Disabled	RF Delinquency Enabled
OFF	OFF	6	For Future Use	
ON	OFF	7	RF Jam Detect Disabled	RF Jam Detect Enabled
OFF	OFF	8	Global Placement Test	Individual Placement Test

*NOTE: For UL Listed installations, the RF Jam detect feature must be enabled.*

*NOTE: For DD243 installations, the RF delinquency feature should be enabled.*

*NOTE: Supervision must be enabled for RF Delinquency.*

## [93] RF Jam Detect Zone

Default: 00   |  |  |    Valid entries = 01 - 32, 00 = No RF Jam tone selected.

Select an unused zone that will be set to the tamper state when a jamming signal is detected.